

### Running Hard or Flexible Conduit into 2003 Spas

Our recommendation for installing either hard or flexible conduit into a new spa is as follows:


Choose either left or right side panel, not the front.

Mark the skirt panel at the desired height against the corner cover.

Remove the corner cover and verify that there is no interference with the spa frame at the desired height.

Bore a hole the needed size with the left side of the hole saw to the right of the line, if you are on the right side of the spa. Reverse if you are on the left side.

Use a utility knife to extend a cut from the top and bottom of the hole to the side. This completes a U-shaped cut out for the conduit which allows the side panel to be removed.

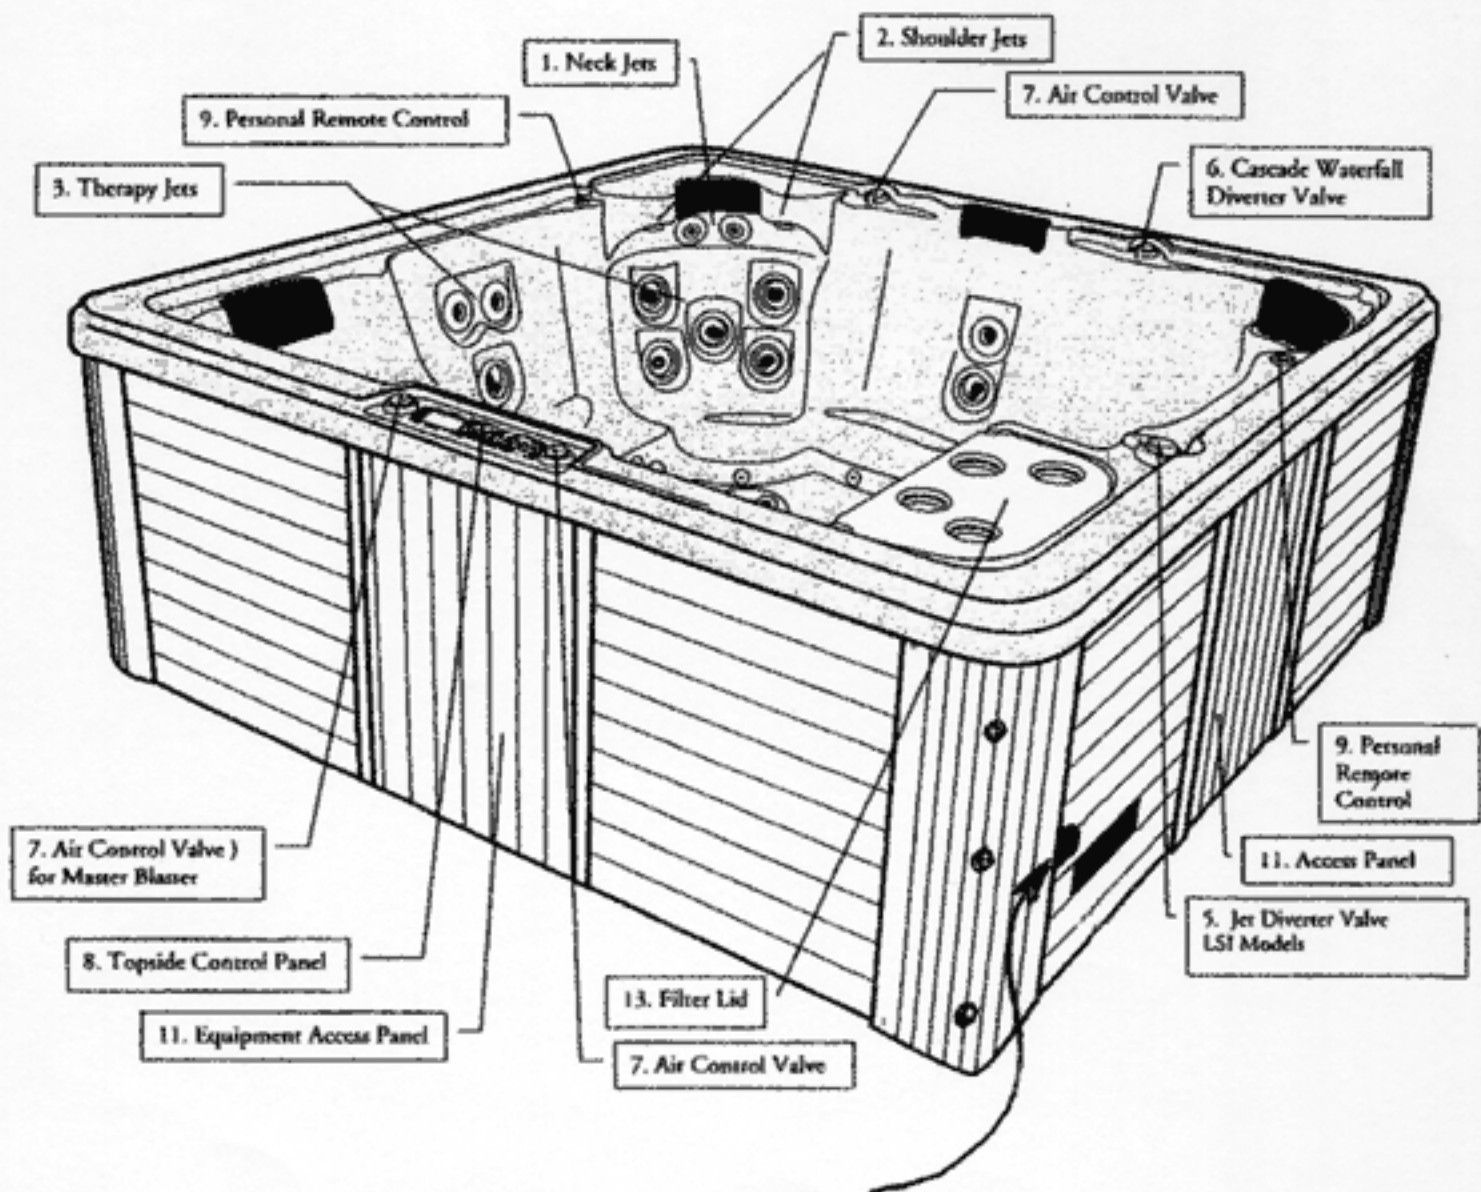

**Conduit entry location.** U – shaped extension of horizontal slot concealed by corner cover.